


## 40-013 Positioning of jacking-up shoes and jacks

### Special tools

Jacking-up shoe  
required 4 each





123 589 11 63 00

### A. Models 107, 114, 115, 116 and 123

Between jack and frame floor, as well as when lifting vehicle with short stroke lifting platform, use jacking-up shoes for plugging-in at outer frame side members.

These jacking-up shoes will reliably prevent any denting of outer frame floor side members. The jacking-up shoes are providing the additional advantage that no bending torque is exerted against the plug-in tubes themselves, and there are no objections against loads against body for extended periods.

The flap positions required for positioning the jacking-up shoes for the individual models are shown on identification.

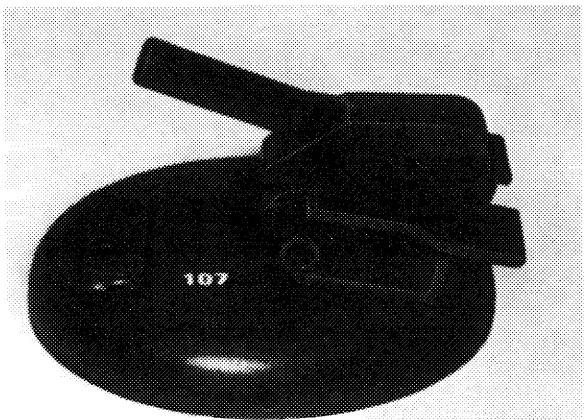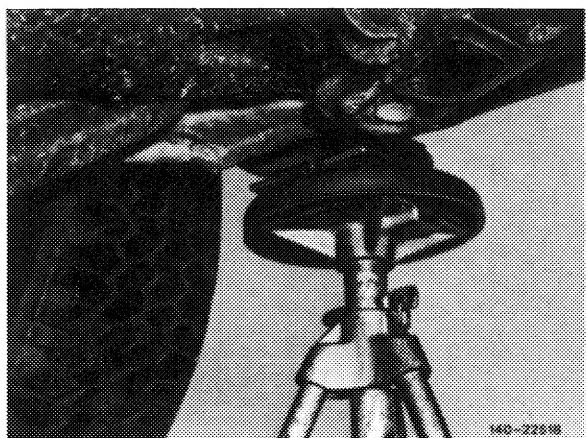

Model 107

140-22521